

# ULTRASONIC DOGCHASER

## KEEP THOSE UNFRIENDLY DOGS OUT OF YOUR WAY!

New **ULTRASONIC DOGCHASER** is the most humane and safe way to deter the unfriendly dogs. It can also functioned as dog training device by pressing the power button and conjuncting with the verbal or hand commands.

The **ULTRASONIC DOGCHASER** emits frequency ranged from 20,000 Hz to 25,000 Hz intervally which is hardly audible by humans but can be heard by dogs or cats. **ULTRASONIC DOGCHASER** may harmlessly deter the approach of a dog or cat while properly used. As the device will project ultrasonic waves intervally during constant activated, you just press the power button continuously and directly point the ultrasonic transducer toward the approaching unfriendly dog. The ultrasonic waves emitted from **ULTRASONIC DOGCHASER** will discomfort the dogs and make them get away. The **ULTRASONIC DOGCHASER** will help the user to establish a safe zone between he or she and the unfriendly dogs.

A built-in red L.E.D. indicator will light when the power button is depressed. When the L.E.D. does not light or shows gloomy, it is time to replace battery.

### **OPERATING INSTRUCTIONS:**

1. To remove the lid of battery box, use screw driver to unscrew anti-clockwise.
2. Insert a 9V alkaline battery as indicated on the battery box.
3. To ensure battery installation is correct, pressing the power button to see if the red L.E.D. is lit up.
4. Replace the battery box lid and screw it up properly.
5. Your **ULTRASONIC DOGCHASER** is ready for use.
6. A built-in belt clip allows user to carry **ULTRASONIC DOGCHASER** easily.

To replace battery simply repeats step 1 and take out the old battery. Insert new 9V battery by following the steps 2-4.

### **IMPORTANT:**

- \*Do not point the device to humans directly.
- \*Do not test the device on your own pets or a familiar animal to prevent them from confusion due to loyalty instincts.
- \*Do not let the unit come in contact with water.
- \*Do not modify or temper with the unit internal components.
- \*Covering or painting over the front speaker can damage the device and cause it malfunction or working improperly.
- \*The device may not be effective on all canines. Age, temperament, illness and training may affect an animal's behavior. It may not affect on a deaf animal.
- \*This **ULTRASONIC DOGCHASER** would help you to create a safe zone between you and the unfriendly dogs, but always take normal precautions when confronting a dog in addition to using this device.

### **SPECIFICATIONS:**

Dimensions: 94 X 60 X 27 m/m

Weight: 53g

Power supply: 9V (1 X 9V Battery)

Frequency range: 20,000 Hz - 25,000 Hz

Sound pressure: 135 dB

Effective range: Within 20 ft.

